


Thanks for purchasing our products, please read this manual carefully before using your new tuner.

## I. Warning

1. Do not disassemble or repair this tuner by yourself.
2. Do not use or store the tuner in areas with high temperature, high humidity, high dust or areas susceptible to static or electric shock.
3. Do not drop this tuner.
4. Do not use strong cleaners or solvents to clean this tuner.

## II. Part names and functions

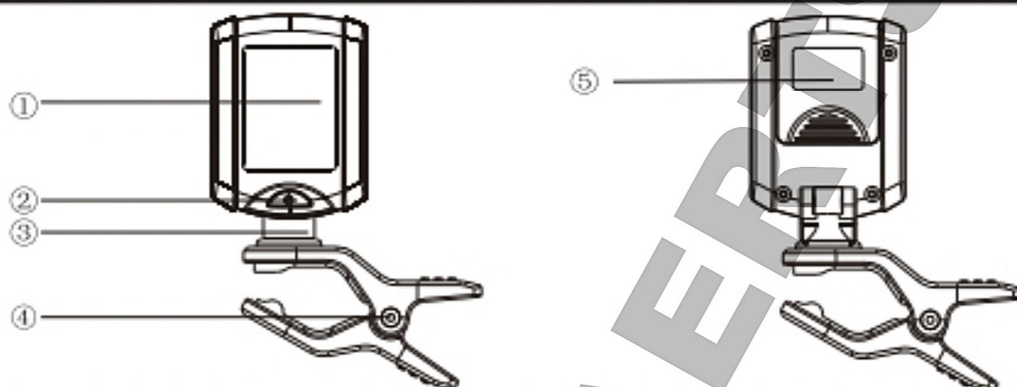

1. LCD Screen: Displays operations

2. Function Button: Changes functions of the unit

3. Axis

4. Clip: Use to attach to instrument

5. Battery Compartment

## III. Replace Battery

Please load in the battery (included in the package) by following steps.

1. Press the front of the battery cover and then slide back to remove cover.
2. Put the battery into the battery compartment by placing the negative(-) pole of battery facing the inside. Insert the front of cover and then press down and push to close.
3. After inserting the battery, the unit will be on and in tuner mode.
4. The tuner will be power off automatically after 3 minutes if no operation

## IV. Functions and Operation

Button	Press	Press and hold 2 seconds
	Select Tuning Items	Power ON/OFF

## V. How to Tune

1. Get the machine ready for tuner as what you want by following ' IV. Functions and Operation ' .
2. Clip the tuner onto your instrument. Adjust the tuner for best viewing angle.
3. Play a single note. The tuner displays the note name. If the indicator in the screen points toward left and the screen in white, the note is flat. If the indicator points to the right and the screen in white, the note is sharp. The indicator stays vertical and the screen in green, the note is in tune.

\* The tuner MUST be clipped onto your instrument to tune.

## VI. Specifications

A4 Frequency: 440Hz

Tuning Item: Chromatic, Guitar, Bass, Violin, Ukulele

Tuning Range: A0(27.5Hz)-C8(4186.01Hz)

Weight: 23g

Dimension: 55(L)×30 (W) ×80(H)mm

## VII. Accessories

Manual

Battery: CR2032, 1 piece