

 


QUICKSTART GUIDE

INSIDE THIS BOX




1. Roadie 3




2. USB-C cable


1 MEET YOUR TUNER

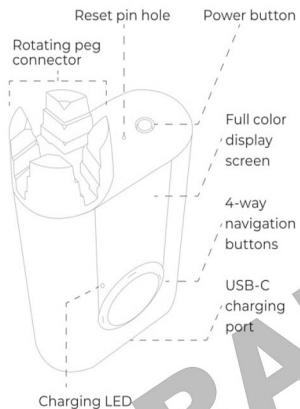

2 CREATE AN INSTRUMENT

 

 1. Select "Tuner"



2. Select "Add Instrument"



3. Choose your instrument type



4. Select the number of strings



5. Name your instrument

3 TUNE WITH ROADIE 3

1. Select "Tuner" and choose your instrument



2. Place Roadie on the peg and pluck the string

 


Roadie will tune sequentially in ascending order. It will beep and vibrate when the string is in tune.

3. Move on to the next string or select the string you want to tune by pressing up or down




4 ALTERNATE TUNINGS




1. Select your instrument



 
2. Click the right button to enter the Instrument Settings screen



 3. Click the right button again to enter the Tuning Settings screen



 4. Press up or down to change the current tuning to the tuning of your choice



5. Press the left button twice to go back to the tuning screen and tune your instrument

5 CHANGE CAPO



1. Select your instrument



 
2. Click right to enter the Instrument Settings screen



3. Navigate to "Capo" and press the right button to enter



4. Navigate up or down to select your capo value



5. Capo transposes the tuning. Ex: -1 will tune half-step up, -1 will tune half-step down

 
6 REFERENCE PITCH




1. Select your instrument



2. Click the right button to enter the Instrument Settings screen



 3. Navigate to "A4" and press the right button to enter




4. Navigate up or down to select the desired A4 reference pitch




5. Your pitch of choice will now be displayed during tuning

7 TUNE-UP AND ACCURACY

 TUNE-UP




 1. Navigate down to Settings and click the right button to enter the Settings screen




2. Click the right button to select "Tune Up", and choose your mode (enabled or disabled)

 ACCURACY



 
1. Navigate down to Settings and click the right button to enter the Settings screen




2. Click the right button to select "Accuracy", and choose your mode (Fast or High Accuracy)

8 METRONOME AND STRING WINDER

 METRONOME




 1. Navigate down to Metronome and click the right button to enter



2. Press up or down to change the tempo. Click right to access the Metronome settings

 STRING WINDER



1. Access "Winder" from the main menu to remove your old string



2. Navigate up or down to wind or unwind

Alternatively, you can also hold the left or right button on the Tuning screen to automatically wind or unwind your string. This is useful for winding and tuning in one step.

DOWNLOAD THE ROADIE MOBILE APP

Download the free Roadie Tuner app to manage your tuning profiles easily and access updates for your Roadie 3.




www.roadiemusic.com/roadie-app

GET MORE GUIDANCE


For the full user manual & FAQs, visit www.roadiemusic.com/support

9 PAIR TO THE APP

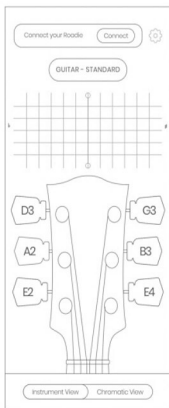

Launch the app and press on "Connect Your Roadie", then follow the on-screen instructions.

10 MANAGE TUNINGS

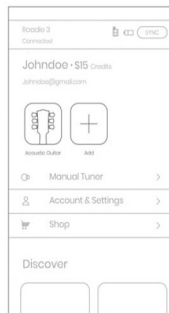

1. Make sure your Roadie 3 is connected to the app and select your instrument, or add one. You can now change the tuning, capo setting, A4 reference pitch or create your own custom tuning.
2. With Roadie 3 connected to the app, press Sync to transfer the changes.

WARRANTY

Your Roadie has a 1 YEAR WARRANTY. To claim the warranty, contact our support team.

GET SUPPORT

Reach out to us anytime at SUPPORT@ROADIEMUSIC.COM

TROUBLESHOOT

HARD RESET

If your Roadie 3 has become unresponsive or frozen, a hard reset may be required.



Insert a pin into the reset pinhole located between the power button and the tuning peg connector. You'll hear a click and the screen will turn off.

FACTORY RESET

Before performing Factory reset, contact our support team to get assistance. Factory reset erases all your instruments and tunings. Make sure you have synced with the app if you'd like to keep them.



1. Navigate down to Settings and click the right button to select it.
2. Select "Factory reset", and hold the right button to reset your Roadie 3.

SAFETY INSTRUCTIONS

Please read these instructions, keep them and follow them. Do not tamper with your device. Do not attempt to disassemble or open your device. Substances contained in this product and/or its battery may damage the environment and/or human health. If handled and disposed of improperly, Do not expose your device to extremely high or low temperatures. Do not leave your device in direct sunlight for an extended period of time. Do not leave your device near open flames. Do not dispose of your device in a fire. The battery could explode. Do not use abrasive cleaners to clean your device. Do not place your device in a dishwasher, washing machine or dryer. Regardless of what reasons cause unit damage, please refer to the maintenance personnel to repair it.

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5cm between the radiator and your body.

FCC Statement:

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's warranty for this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

ISED Statement

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's low license-exempt (RSS) limits. Operation is subject to the following two conditions: This device may not cause interference. This device must accept any interference, including interference that may cause undesired operation of the device.

ISED Radiation Exposure Statement

The equipment complies with ISED Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 5cm between the radiator and your body.

Caution

The battery shall not be exposed to excessive heat such as sunshine, fire or the like. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Choking Hazard

Caution: This automatic tuner contains small parts that may pose a choking hazard, especially for young children. Keep out of reach of children and pets. Additionally, ensure proper disposal of plastic covers and packaging to prevent choking incidents. Never leave packaging materials within reach of children.

Definition of Intended Use

This automatic tuner is designed for stringing tuned instruments with geared pegs only. Any other use, as well as use under different operating conditions, is considered improper and may result in damage to the tuner or the instrument being tuned. Please adhere

strictly to the intended purpose outlined in this manual.

Fire Hazard

Replacing the internal battery is not recommended. If replacement is necessary, ensure correct polarity to avoid fire risk.

Correct disposal of this product

This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment and human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for an environmentally safe recycling. Operating temperature 32-104°F (0-40°C).

Disclaimer

This manual describes the version of Roadie as of July 2023. Although Band Industries has made every effort to ensure that the information contained in it was correct at publish time, it does not assume and hereby disclaim any liability to any party for any loss, damage or disruption caused by errors or omissions, whether such errors or omissions result from negligence, accident or any other cause. The information in this Product Manual is subject to change without notice. Band Industries makes no representations or warranties with respect to the content hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Band Industries reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Band Industries to notify any person of such revision or changes.

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this Product Manual, nor any of the material contained herein, may be reproduced without written consent of Band Industries.

Trademark recognition

Band Industries, the Band Industries logo, Roadie, Roadie 3, and the Roadie 3 Logo are trademarks and/or registered trademarks of Band Industries, Inc. in the US, EU and other countries.



Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner. Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.



Batteries must not be thrown away or burnt, but must be disposed of in line with the local regulations on the disposal of hazardous waste. They should be returned to the manufacturer for disposal or recycled elsewhere in accordance with your local regulations. Only dispose of lithium batteries when they are empty. Remove lithium batteries from the device before disposal if this is possible without destroying it. Protect used lithium batteries against short-circuit, for example by taping the poles. Dispose the built-in lithium batteries together with the device. Check for an appropriate collection facility. Dispose of the batteries and rechargeable batteries at relevant collection points or through your local waste facility.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended. Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. When disposing of the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste management facility. Proper disposal protects the environment as well as the health of your fellow human beings. Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal. You can return your old device to Thomann GmbH at no charge. Check the current conditions on www.thomann.de. If you do not have certain personal data, delete those data before disposing of it.



Observe the disposal note regarding documentation in France.